User Manual










Summary

| English | 1 |
|--------------|------|
| Français | 13 |
| Deutsch | 25 |
| Italiano | 37 |
| Nederlands | 49 |
| Português | 61 |
| Español | 73 |
| Classes Yima | O.F. |





(

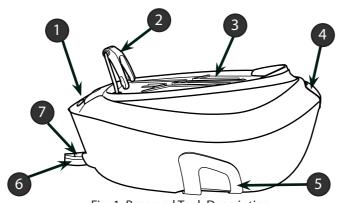

| 1 | Control Panel | |
|---|-------------------------------|--|
| 2 | Iron Lock System | |
| 3 | Iron Resting Mat | |
| 4 | Water Tank Filler Cover | |
| 5 | Cord Storage for Hose & Mains | |
| 6 | Supply Hose | |
| 7 | Mains | |




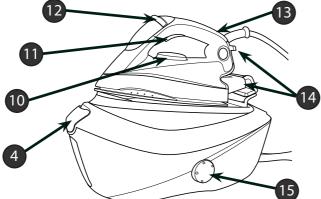



Fig. 2: Domestic Iron Description



| 10 | Temperature Dial | |
|----|------------------------------------|--|
| 11 | Steam Trigger | |
| 12 | Multi Steam Technology Selector | |
| 13 | Temperature Dial Indicator | |
| 14 | Pads for Vertical Positioning | |
| 15 | Calc Clean Knob | |

(

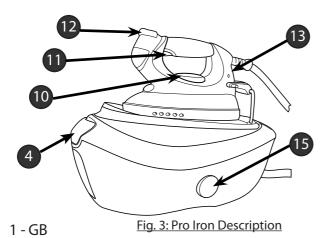

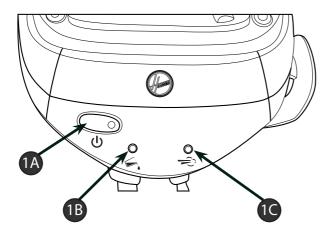

| 1A | On/Off Switch | |
|----|--------------------------|--|
| 1B | "Water Tank Empty" Light | |
| 1C | "Steam Ready" Light | |

Fig. 4: Domestic Iron Control Panel



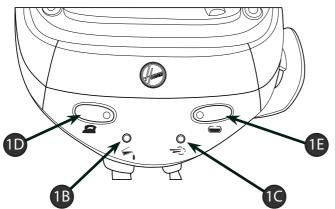


Fig. 5: Pro Iron Control Panel

| 1D | 1D On/Off Iron | |
|----|----------------|--|
| 1E | On/Off Boiler | |
| | | |
| | | |

(



IRONspeed



Introduction

Dear customer.

Congratulations on the purchase of your new Hoover ironing system. This appliance has been manufactured to the highest standards. Used correctly, your Hoover ironing system will delivery many years of quick, hassle free ironing.

Before using your new Hoover appliance, please take the time to read this user manual carefully. If you need further information or if you encounter any issues which are not dealt with in this manual, please contact your local dealer.

Important Safety Instructions

Please read this user manual carefully before your first use and save it for future reference.

- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible and the guarantee will be invalid.
- Before connecting your appliance, check if the main voltage is the same as the voltage indicated on your appliance and that the power outlet is connected to the earth.
- Ensure before each use that the electric cord or any other important part is not damaged.
- This appliance is not indented to for use by children or persons with reduced physical, sensory or mental capabilities, unless they are adequately supervised in its operation and use by an adult responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must be used and placed on a flat and stable surface. When you replace the iron on its stand, make sure that the surface on which you place it is stable.
- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or/and electronic appliances.
- Do not use the appliance if it has fallen down, or if the appliance shows evidence of breakdown, malfunction, leakages. Please have the product checked by authorized Service Centre to avoid any danger.
- Always make sure the appliance is switched off, unplugged and cooled down before doing any maintenance work.
- \bullet Never leave the appliance unattended when plugged in and before it has cooled down.
- Do not unplug the appliance by pulling on the cord or on the appliance.
- \bullet Never immerse the iron, the stand, the cable or the plugs in water. Never hold them under the water tap.
- The soleplate of the iron can become extremely hot and may cause burns if touched. Never touch the electric cords with the soleplate.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.







Chapter 1.1 - Control Panel

On/off switch (1a): A light on the switch will illuminate to indicate that the appliance is switched on. (domestic irons models only)

On/off iron (1d): By switching it on, the iron soleplate will start to heat up. Recommended for dry ironing session. (only with professional iron)

On/off boiler (1e): By switching it on, the boiler will start to heat up. Please note that iron switch (1d) needs to be switched on to heat up the boiler. (only with professional iron)



When the appliance is switched on and "Steam ready" light (1c) is off, it means that steam is ready. You can press the steam trigger and steam will escape from the soleplate. Please note that during use, the steam light will switch on but you can continue steam ironing.

"Water tank empty" light (1b) is on: There is no more water in the tank. Please refill the tank following the instructions in the chapter 2.2

Chapter 1.2 - Lock System

In order to facilitate the carrying and the storage of your ironing system, your appliance is designed with a lock system (2). This system locks the iron on the upper tray. It's therefore very easy to move and store the appliance. Please follow the instructions below to lock the iron on the resting mat (3).



Fig. 6: Domestic Iron Lock System

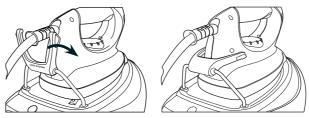


Fig. 7: Pro Iron Lock System

To unlock it, do the opposite to the instructions above.

Warning: Do not carry your appliance by the iron.

4 - GB





Chapter 2: Preparation for Use

Due to the powerful output of steam, Hoover recommends the use of an active ironing board with blowing and vacuuming function which allows escape of any excess steam.

Place the ironing system on a stable and level surface, for example on the hard part of an ironing board or on a heat-resistant surface.

Chapter 2.1 - What Kind of Water May be Used?

The Hoover ironing system has been designed to be used with tap water only. There is no need to use distilled or pure distilled water. Nevertheless, in case you live in a hard water area, you can mix 50% of distilled water with 50% of tap water. Do not use any other kind of water or do not add any contents to the removable water tank as it can damage your appliance.

Chapter 2.2 - Filling the Water Tank

Open the water tank filler cover (4) to gain access to the water tank. Fill it with tap water with the help of a bottle. Do not exceed the max mark.

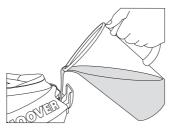


Fig. 8: Water Tank Filling

Warning: Do not add vinegar, hot water, perfume, or any other kind of chemical agents or any other contents in the water tank. It could damage the steam generator and shorten its life use.

Chapter 2.3 - Switching On the Appliance

Domestic Iron Models:

Connect the appliance with the mains cord to an earthed socket and switch on the power. Press the on/off switch. The light (1a) will illuminate, this tells you that the appliance is working and that the boiler is heating up.

After approximately 2 minutes, the "steam ready" led will light off and you can now start to use the steam feature.

Professional Iron Models:

Connect the appliance with the main cord to an earthed socket. Press the iron on/ off switch (1d) and the boiler on/off switch (1e). The lights of both switches should light up and inform you that the appliance is working and the iron soleplate and boiler are heating up.







N.B.

The first time the appliance is used, you may find some fumes and a noticeable smell appear. This is quite normal and will disappear quickly.

Chapter 3: Using Your Steam Generator



Select the temperature of the soleplate by turning the dial (10) on the iron to the desired position. Wait a few moments until the temperature indicator (13) is off. It will indicate to you that the soleplate has reached the requested temperature.

While ironing, the temperature dial indicator may turn on and off, the temperature adjusts without interrupting your ironing.

Help

Check the laundry care label of the garment to select the best temperature for each textile. Please note that during use, the temperature light goes on from time to time. It signifies that the iron is heating up to the set temperature. If your garment is made with various kinds of fibers always select the soleplate temperature to reflect the most delicate fabric.

If the temperature is too low, some drops of water could escape from the soleplate. Please raise up the temperature above the 2 dots ($\bullet \bullet$) to avoid this issue.

Chapter 3.2 - Ironing

Dry Ironing

Domestic Iron Models:

Select the temperature of the soleplate following the indications of chapter 3.1. When the soleplate reaches the required temperature, start your ironing without pressing the steam trigger (11).

Professional Iron Models:

Only turn on the iron switch (1d). Select the temperature of the soleplate following the instructions in chapter 3.1. Start your ironing when the soleplate reaches the appropriate temperature.

Steam Ironing

Select the temperature of the soleplate following the instructions in chapter 3.1. On the stand, when the steam function is ready, the dedicated lamp (1d) will turn off. Starting from that time you can begin your ironing and press the steam trigger (11). The steam flow stops when you release the trigger.

You have the possibility to regulate the steam flow with the Multi Steam Technology selector (12). In order to achieve the best results, please refer to the dedicated chapter 3.3 for more information.

6 - GB





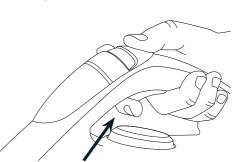


Fig. 9: Pressing Steam Trigger Graphic

Professional Iron Models Only

Steam lock function: The steam lock allows you to steam iron without pressing the steam trigger. Steam will therefore flow continuously. To activate or deactivate the steam lock, slide the steam lock forwards or backwards.

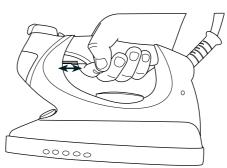


Fig. 10: Steam Trigger Lock Graphic

N.B.

During use, you may hear noise coming from your steam generator. This is normal. It signifies that a pump is injecting water into the boiler. Ideally, avoid using the steam trigger at this precise moment to avoid a fall in pressure.

Chapter 3.3 - How to Choose the Correct Soleplate Temperature and Steam?


To obtain the best results, it is really important to set the correct temperature of the soleplate and the steam flow you are using. Your Hoover appliance has a unique Multi Steam Technology selector (12). If correctly used, it will simplify your ironing and provide outstanding results, making ironing easier and faster.

Your iron features innovative Multi Steam Technology, you can use steam on most textiles to give great results. You have the choice between 3 preset settings: Diffuse Caresse, Profound Care and Precise Power. Each setting will adapt the humidity, power and direction of the steam flow, so you can adapt the steam flow to suit the garment giving outstanding results.





| Textile | Steam Type | Soleplate T°C |
|-------------------|-----------------|---------------|
| Wrinkled Textiles | Precise Power | •••/Max |
| Tricky Zone | Precise Power | ••/••• |
| Jeans | Profound Care | Max |
| Cotton | Profound Care | ••• |
| Linen | Profound Care | Max |
| Starched Clothes | Profound Care | ••• |
| Velvet/Alcantara | Profound Care | |
| Wool | Profound Care | |
| Silk | Diffuse Caresse | •• |
| Cashmere | Diffuse Caresse | •• |
| Rayon | Diffuse Caresse | •• |
| Polyester | No | • |
| Nylon | No | |
| Acrylic | No | • |
| Lycra | No | • |
| Polyamid | No | • |

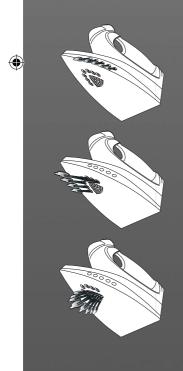

Diffuse Caresse

This steam flow is dedicated to iron with great care the most delicate textiles like silk and cashmere with a soft and delicate flow. A reduced steam flow is spread carefully in front of the iron on a large part of textile. Fibres are better loosened in order to take away delicately and faster all the creases.

Precise Power

The flow is directed towards the tip. It permits to access the most difficult zones, like buttons, sleeves and loops through the concentrated flow in the tip and offers a constant, concentrated and powerful sprout. Difficult zones are better humidified and hence creases removed faster.

Profound Care

This vertical steam flow allows removing more easily and quickly the wrinkles on all textiles with a strong and humid jet. Steam impregnates better the fibres and the large soleplate dries the textile. Wrinkles are therefore removed faster.

Help

When steam ironing clothes on which shiny patches may occur, we recommend you to set the soleplate temperature to a lower temperature or iron the garment on the reverse.

Start with the fabrics that needed to be ironed at a lower temperature (•) and finish with those that needed to be ironed at the higher temperature (•••/Max).

8 - GB

 \bigoplus



Chapter 3.4 - Vertical Steam Ironing



Set the soleplate temperature to the max temperature and set the Multi Steam Technology selector (12) to the Profound care program.

Hang curtains and clothes (jackets, suits, coats). Hold the iron in vertical position at a short distance of the fabric to avoid burning it. Press the steam trigger (11) to steam iron moving it from top to bottom.

Warning: Do not direct the steam jet towards people or animals.


Chapter 3.5 - Refilling the Water Tank During Usage

You can fill the water tank at any time during use.

When the water tank is empty, the "Empty water tank" light (1b) will switch on. No more steam escapes from the soleplate. Open the water tank filler cover (4) and refill the water tank with the help of a bottle of water without exceeding the max mark level.

Please refer to chapter 2.2 for more detailed instructions.

Chapter 4: Maintenance and Cleaning

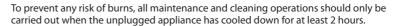



Chapter 4.1 - Cleaning the Appliance

Do not use any detergent or descaling products for cleaning the soleplate. Regularly clean it with a humid and non-metallic pad.

Empty the water tank after each use before storing it.

To clean the plastic parts of the stand, please use soft clothes.

Chapter 4.2 - Rinsing the Boiler for Scale Maintenance

In order to maximise the life of your appliance, you should rinse the boiler every 2 months to avoid scale deposit in the boiler.

Before proceeding, be sure that the appliance is cooled down and unplugged for at least 2 hours.

Place the stand on the edge of your sink and place the iron on a flat surface. Remove the calc removal cap (15). Unscrew the boiler rinse safety cap anti-clockwise with a coin and remove it. Fill the boiler with 0,2 liters of tap water using a funnel and a bottle. Shake the stand and then empty the boiler completely, filing out the water in the sink. We recommend repeating this operation twice. Screw the boiler rinse safety cap with a coin and put back the calc removal cap (15).

9 - GB





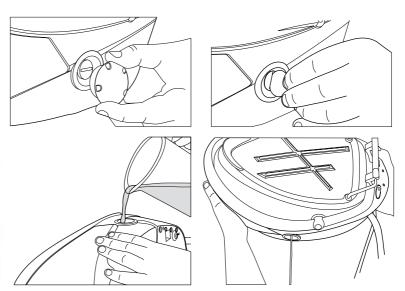


Fig. 11: Cleaning Operation

In any case, do not use any descaling products to clean or rinse the boiler.

Chapter 4.3 - Storage

Switch off the appliance and unplug it.

Put the iron on the heat-resistant iron resting mat (3). Wait at least 30 minutes allowing the soleplate and the generator to cool down.

Lock the iron with the iron lock system (2). Please report to the dedicated chapter 1.2 for further instructions.

Store both steam and electrical cables in the cord storage feature (6).

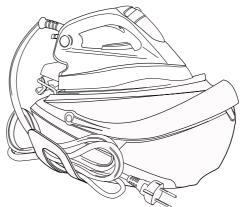


Fig. 12: Cord Storage

Then you can take away your appliance in order to store it safely and easily.

10 - GB

 \bigoplus



Troubleshooting

| Problem | Cause | Solution |
|--|---|--|
| The appliance does not become hot | There is a connection problem | Check the mains cord, the plug and the wall socket |
| | The appliance is not switched on | Press on the on/off switch |
| | The soleplate temperature is too low | Set a higher temperature of the soleplate |
| The appliance does not produce steam | The appliance is not switched on | Press on the on/off switch |
| | The boiler has not yet heated up | Wait a few moments until the steam ready LED is off |
| | The water tank may be empty | Refill the water tank |
| | You are not pressing the steam trigger | Press the steam trigger |
| | The soleplate temperature is set to the maximum | It works but steam is not visible as very hot and dry. |
| Steam escapes from the calc removal cap when | The calc removal valve is not tightened enough | Switch off the appliance and let it cool down. |
| ironing | | Remove the calc removal cap and tighten the valve correctly |
| | The anti-scale valve is damaged | Contact your after sales service |
| The empty water tank LED is on | There is no more water in the tank | Refill the water tank with water |
| The soleplates becomes dirty or brown | There should be chemical or additives in the water used | Never use any chemical or additives in the water. |
| | for ironing | Contact your after sales service if the linen is still dirty |
| | The linen is still dirty | Clean the soleplate with a non-metallic sponge |
| Water stripes appear on the textile | Your ironing board cover is saturated in water | Change the cover or use a mesh ironing board |
| Some scale deposit appears on the soleplate | Your boiler has not been rinsed for a while | Follow the indications in the appropriate chapter |







Important Information

Hoover spares and Consumables

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering spare parts, always check your model number.

Hoover Service

Should you require service at any time, please contact your local Hoover Service Office. Please see all the contact details below.

Safety

Hoover believes that independent approval is the best way of demonstrating safety in design and manufacture. "Istituto del Marchio di Qualità" (IMQ)), the independent italian national authority for the safety of domestic electrical appliances, ensures that European safety standards are met and maintained throughout the production life of an appliance. All appliances that pass the requirements are permitted to carry the IMQ mark of safety.

Quality

ISO 9001

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

The Environment

This appliance is marked according to the European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the appliance collection point for recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with the local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Your Guarantee


The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.





Description Français

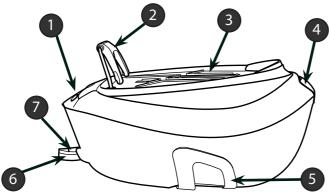

| fig. 1: Descri | ntion d | ا دا م | ass at | du | rácary | nir |
|----------------|---------|--------|---------|-----|---------|------|
| ilg. I. Descri | puon a | e ia i | Jase et | uuı | lesel (| /UII |

| 1 | Panneau de commande |
|---|-----------------------------------|
| 2 | Système de blocage du fer |
| 3 | Tapis support |
| 4 | Couvercle du réservoir d'eau |
| 5 | Rangement pour flexible et cordon |
| 6 | Flexible d'alimentation |
| 7 | Cordon |


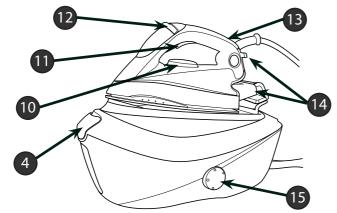


fig. 2: Description du fer domestique

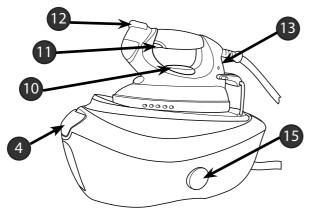


13 - FR <u>fig. 3: Description du fer professionnel</u>

| 10 | Température de la semelle |
|----|---|
| 11 | Déclencheur de vapeur |
| 12 | Sélecteur Multi Steam Technology |
| 13 | Cadran indicateur de température |
| 14 | Protections pour le positionnement vertical |
| 15 | Bouton de nettoyage du calcaire |

(

(




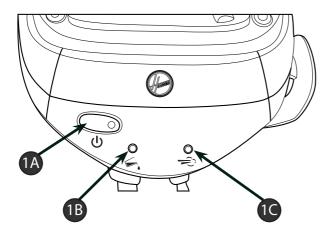

| 1A Bouton de Marche/Arrêt. | |
|----------------------------|--------------------------|
| 1B | Témoin de réservoir vide |
| 1C | Témoin de vapeur prête |

fig. 4: Panneau de commande du fer domestique



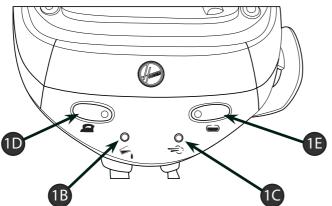

| 1D | Bouton de Marche/Arrêt du fer |
|----|--|
| 1E | Bouton de Marche/Arrêt de de la chaudière |

fig. 5: Panneau de commande du fer professionnel

(



IRONspeed



Introduction

Cher Client,

Nous souhaitons tout d'abord vous remericer d'avoir acheté une centrale vapeur Hoover et d'avoir fait confiance à la marque Hoover. Cet appareil a été fabriqué conformément aux normes les plus élevées. S'il est utilisé correctement, votre système de repassage Hoover vous assurera des années de repassage rapide et sans problème.

Avant d'utiliser votre nouvel appareil Hoover, prenez le temps de lire attentivement ce manuel. Si vous avez besoin d'informations supplémentaires ou si vous rencontrez des problèmes non traités dans ce manuel, veuillez contacter votre revendeur local.

Instructions importantes de sécurité

Veuillez lire attentivement ce manuel d'utilisation avant d'utiliser le fer pour la première fois et gardez-le pour pouvoir le consulter à d'autres occasions..

- Ce produit a été conçu uniquement pour l'usage domestique. En cas d'usage commercial, d'utilisation inappropriée ou de non respect des instructions, le fabricant décline toute responsabilité et la garantie sera invalidée.
- Avant de brancher l'appareil, vérifiez que la tension du courant est la même que celle indiquée sur l'appareil et que la prise est connectée à la terre.
- Avant chaque utilisation, vérifiez que le cordon électrique ou toute autre pièce importante n'est pas endommagé(e).
- Cet appareil ne doit pas être utilisé par des enfants ou des personnes ayant des capacités physiques, sensorielles ou mentales réduites, à moins que leur sécurité soit adéquatement assurée par un adulte lors de l'utilisation.
- Surveillez que les enfants ne jouent pas avec l'appareil.
- Le fer doit être utilisé et posé sur une surface plate et stable. Quand vous replacez le fer sur son support, assurez-vous que la surface de pose est stable.
- Ne dirigez jamais le jet de vapeur vers des personnes ou des animaux. Ne dirigez jamais le jet de vapeur vers d'autres appareils électriques ou électroniques.
- N'utilisez pas l'appareil s'îl est tombé ou s'îl présente des dommages, dysfonctionnements ou fuites. Pour éviter tout danger, veuillez faire vérifier l'appareil par un centre de service agréé.
- Avant toute intervention d'entretien, vérifiez toujours que l'appareil est éteint, débranché et a refroidi.
- Ne laissez jamais l'appareil sans surveillance quand il est branché et n'a pas encore refroidi.
- Ne débranchez pas l'appareil en tirant sur le cordon ou sur l'appareil.
- N'immergez jamais le fer, le support, le câble ou les fiches dans l'eau. Ne les mettez jamais sous le robinet.
- La semelle du fer peut devenir extrêmement chaude et provoquer des brûlures en cas de contact. Ne touchez jamais les cordons électriques avec la semelle.
- Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, le service après-vente ou d'autres personnes qualifiées pour éviter tout danger.







Chapitre 1.1 - Panneau de commande

Bouton de Marche/Arrêt (1a): Un témoin s'allume sur le commutateur pour indiquer que l'appareil est allumé. (Concerne les modèles de fers pour usage domestique uniquement)

Fer allumé/éteint (1d): Quand ce bouton est allumé, la semelle commence à chauffer. Conseillé pour le repassage à sec. (uniquement avec un fer professionnel)

Chaudière allumée/éteinte (1e): Quand ce bouton est allumé, le bouilleur commence à chauffer. Notez que le commutateur du fer (1d) doit être allumé pour que le bouilleur chauffe. (uniquement avec un fer professionnel)



Quand l'appareil est allumé et que le témoin de vapeur prête (1c) est éteint, la vapeur est prête à l'emploi. Vous pouvez appuyer sur le déclencheur afin de faire sortir de la vapeur sous la semelle. Remarque : le témoin de vapeur s'allume pendant l'utilisation du fer, mais vous pouvez continuer à repasser à la vapeur.

Le témoin de réservoir vide (1b) est allumé : il n'y a plus d'eau dans le réservoir. Remplissez le réservoir en suivant les instructions du chapitre 2.2.

Chapitre 1.2 - Système de blocage

Pour faciliter le transport et le rangement de votre système de repassage, l'appareil comprend un système de blocage (2). Ce système bloque le fer sur le support supérieur. Cela facilite le déplacement et le rangement de l'appareil. Suivez les instructions ci-dessous pour bloquer le fer sur le tapis support (3).



fig. 5: Système de blocage du fer domestique

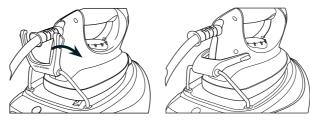


fig. 7: Système de blocage du fer professionnel

Pour le débloquer, suivez les instructions ci-dessus en sens inverse.

Mise en garde: Ne portez pas votre appareil en le tenant par le fer.

16 - FR





Chapitre 2: Préparation à l'emploi

Étant donné la sortie puissante de vapeur, Hoover conseille d'utiliser une planche à repasser active, avec fonctions de soufflerie et d'aspiration permettant l'évacuation de la vapeur en excès.

Placez la centrale vapeur sur une surface stable et plane, par exemple sur la partie dure d'une planche à repasser ou une surface résistante à la chaleur.

Chapitre 2.1 - Quel type d'eau peut être utilisé?

Le système de repassage Hoover a été conçu pour être utilisé avec de l'eau du robinet. Il n'est pas nécessaire d'utiliser de l'eau distillée ou pure. Cependant, si vous vivez dans une région où l'eau est très dure, vous pouvez mélanger 50% d'eau distillée et 50% d'eau du robinet. N'utilisez pas d'autres types d'eau et n'ajoutez aucun autre élément dans le réservoir à eau amovible, car cela risquerait d'endommager l'appareil.

Chapitre 2.2 - Remplissage du réservoir d'eau

Ouvrez le couvercle du réservoir d'eau (4) pour pouvoir accéder au réservoir. Remplissez d'eau du robinet à l'aide d'une bouteille, d'un pichet ou autre récipient avec bec verseur. Ne dépassez pas le repère de niveau maximum.

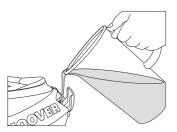


fig. 8: Remplissage du réservoir d'eau

Mise en garde: N'ajoutez pas de vinaigre, d'eau chaude, de parfum ou tout autre agent chimique ou autre dans le réservoir à eau. Cela risquerait d'endommager le générateur de vapeur et d'écourter sa durée de vie.

Chapitre 2.3 - Mise sous tension de l'appareil

Modèles de fers domestiques:

Branchez l'appareil à l'aide du cordon d'alimentation à une prise mise à la terre, puis allumez l'appareil. Appuyez sur le bouton de Marche/Arrêt. Le témoin (1a) s'allume pour vous indiquer que l'appareil fonctionne et que la chaudière est en train de chauffer.

Après deux minutes environ, le témoin de vapeur prête s'éteint et vous pouvez commencer à utiliser la vapeur.

Modèles de fers à repasser professionnels:

Branchez l'appareil à l'aide du cordon à une prise mise à la terre. Appuyez sur le bouton de Marche/Arrêt (1d) du fer et sur le bouton de Marche/Arrêt de la chaudière (1e). Les témoins des deux boutons doivent s'allumer pour vous informer que l'appareil fonctionne et que la semelle du fer et la chaudière sont en train de chauffer.







N.B.

Lors de la première utilisation de l'appareil, il est possible que le fer fume et qu'une odeur forte soit produite. Cela est parfaitement normal et disparaîtra rapidement.

Chapitre 3: Utilisation de la centrale vapeur



Sélectionnez la température de la semelle en tournant le cadran (10) du fer à la position souhaitée. Attendez quelques instants jusqu'à ce que l'indicateur de température (13) s'éteigne, vous indiquant ainsi que la semelle a atteint la température demandée.

Pendant le repassage, l'indicateur de température peut s'allumer et s'éteindre, ce qui indique un réglage de la température, mais il n'est pas nécessaire d'interrompre le repassage.

Aide

Consultez l'étiquette de lavage du vêtement pour sélectionner la température la mieux adaptée à chaque tissu. Notez que le témoin de température s'allume de temps en temps pendant l'utilisation. Cela indique que le fer est en train de chauffer pour atteindre la température réglée. Si le vêtement contient plusieurs types de fibres, sélectionnez toujours la température de la semelle en fonction du tissu le plus délicat.

Si la température est trop basse, il est possible que quelques gouttes d'eau s'échappent de la semelle. Réglez la température au-dessus des deux points (••) pour éviter ce problème.

Chapitre 3.2 - Repassage

Repassage à sec

Modèles de fers domestiques:

Sélectionnez la température de la semelle en suivant les indications du Chapitre 3.1. Quand la semelle atteint la température requise, commencez à repasser sans appuyer sur le déclencheur de vapeur (11).

Modèles de fers à repasser professionnels:

Allumez uniquement le commutateur du fer (1d). Sélectionnez la température de la semelle en suivant les instructions du chapitre 3.1. Commencez à repasser quand la semelle atteint la température appropriée.

Repassage à vapeur

Sélectionnez la température de la semelle en suivant les instructions du chapitre 3.1. Sur le support, le témoin (1d) s'éteint quand la fonction vapeur est prête. Dès ce moment, vous pouvez commencer à repasser et appuyer sur le déclencheur de vapeur (11). Le débit de vapeur s'arrête quand vous relâchez le déclencheur.

Vous pouvez régler le débit à l'aide du sélecteur Multi Steam Technology (12). Pour obtenir de plus amples informations à ce sujet, ainsi que des résultats optimaux, consultez le chapitre 3.3.

18 - FR





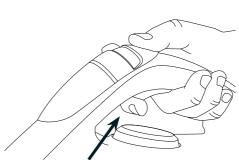


fig. 9: Illustration de l'enfoncement du déclencheur de vapeur

Modèles de fers à repasser professionnels uniquement

Fonction de verrouillage de vapeur: Le verrouillage de vapeur vous permet de repasser à la vapeur sans devoir appuyer sur le déclencheur. La vapeur sera ainsi produite en continu. Pour activer ou désactiver le verrouillage de vapeur, faites qlisser le bouton de verrouillage vers l'avant ou l'arrière.

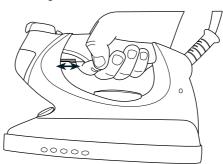


fig. 10: Illustration du blocage du déclencheur de vapeur

Pendant l'usage, vous entendrez parfois un bruit provenant du générateur de vapeur. Cela est normal et ce phénomène se manifeste quand la pompe injecte de l'eau dans la chaudière. Il vaut mieux ne pas utiliser le déclencheur de vapeur à ce moment-là, pour éviter une chute de la pression.

Chapitre 3.3 - Comment choisir la température de la semelle et le débit de vapeur appropriés?


Pour obtenir des résultats optimaux, il est fondamental de régler correctement la température de la semelle et le débit de vapeur à utiliser. Votre appareil Hoover est doté d'une sélecteur Multi Steam Technology (12) unique. Si vous l'utilisez correctement, cette fonction rendra votre repassage plus facile et rapide, et vous permettra d'obtenir des résultats exceptionnels.

Grâce aux fonctions innovatrices de Multi Steam Technology, vous pouvez utiliser la vapeur sur la plupart des tissus et obtenir ainsi d'excellents résultats. Vous pouvez choisir trois fonctions préréglées : Diffuse Caresse (Caresse diffuse), Profound Care (Soin profond) et Precise Power (Puissance précise). Avec chaque réglage, l'humidité, la puissance et la direction du débit de vapeur sont définis, de sorte que vous pouvez adapter le repassage à chaque vêtement et obtenir des résultats exceptionnels.





| Tissus | Type de vapeur | T°C semelle |
|---------------------|-----------------|-------------|
| Tissus froncés | Precise Power | •••/Max |
| Zones délicates | Precise Power | ••/••• |
| Jeans | Profound Care | Max |
| Coton | Profound Care | ••• |
| Lin | Profound Care | Max |
| Vêtements amidonnés | Profound Care | ••• |
| Velours/alcantara | Profound Care | •• |
| Laine | Profound Care | •• |
| Soie | Diffuse Caresse | •• |
| Cachemire | Diffuse Caresse | |
| Viscose | Diffuse Caresse | •• |
| Polyester | No | • |
| Nylon | No | • |
| Acrylique | No | |
| Lycra | No | • |
| Polyamide | No | • |

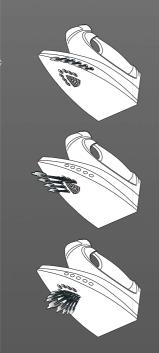

•

Diffuse Caresse

Ce type de débit de vapeur léger et réduit est adapté aux tissus les plus délicats, comme la soie et le cachemire. Il est vaporisé doucement sur l'avant latéral du fer. Les fibres sont desserrées de manière à ce que les plis soient éliminés rapidement sans abîmer le vêtement.

Precise Power

Il s'agit d'un débit concentré, dirigé vers la pointe. Le jet constant et puissant permet d'atteindre les zones difficiles telles que boutons, manches et boucles. Les zones difficiles sont ainsi mieux humidifiées, ce qui permet d'éliminer plus facilement les plis.

Profound Care

Grâce à un jet puissant et humide, la vapeur verticale élimine rapidement et facilement les plis sur la plupart des tissus. La vapeur s'imprègne en profondeur dans les fibres et la semelle sèche le tissu. Les plis sont ainsi éliminés plus facilement.

Aide

Quand vous repassez à la vapeur des vêtements sur lesquels des tâches brillantes risquent de se former, nous vous conseillons de régler la semelle à une température plus basse ou de repasser sur l'envers du tissu.

Commencez par les matières qui doivent être repassées à basse température (•) et terminez par celles qui doivent être repassées à haute température (•••/Max).

20 - FR

 \bigoplus



Chapitre 3.4 - Repassage vertical à vapeur



Réglez la semelle à la température maximum et mettez le sélecteur Multi Steam Technology (12) sur le programme Profound Care.

Suspendez les rideaux ou vêtements (vestes, tailleurs, manteaux). Tenez le fer en position verticale à quelques centimètres du tissu, pour éviter de le brûler. Appuyez sur le déclencheur de vapeur (11) pour obtenir la vapeur et déplacez le fer du haut vers le bas.

Mise en garde: Ne dirigez jamais le jet de vapeur vers des personnes ou des animaux.

Chapitre 3.5 - Remplissage du réservoir d'eau pendant l'usage

Vous pouvez remplir le réservoir d'eau à tout moment pendant l'usage.

Quand le réservoir est vide, le témoin de réservoir vide (1b) s'allume. La vapeur ne sort plus de la semelle. Ouvrez le couvercle du réservoir d'eau (4) et remplissez-le en vous servant d'une bouteille, d'un pichet ou tout autre récipient avec bec verseur, sans dépasser le repère de niveau maximum.

Pour obtenir de plus amples informations à ce sujet consultez le chapitre 3.3.

Chapitre 4: Entretien et nettoyage

Pour éviter tout risque de brûlure, toutes les opérations d'entretien et de nettoyage doivent être effectuées quand l'appareil est débranché et a refroidi pendant deux heures au moins.

Chapitre 4.1 - Nettoyage de l'appareil

N'utilisez pas de détergent ou de produit décapant pour nettoyer la semelle. Nettoyez-la régulièrement avec une éponge humide non métallique.

Après chaque utilisation, videz le réservoir d'eau avant de ranger le fer.

Pour nettoyer les pièces en plastique du support, utilisez des chiffons doux.

Chapitre 4.2 - Rinçage de la chaudière pour éliminer le calcaire

Afin que votre appareil ait une durée de vie maximum, rincez la chaudière tous les deux mois pour éviter les dépôts de calcaire.

Avant cette opération, assurez-vous que le fer est débranché et a refroidi pendant deux heures au moins.

Posez le support sur le bord de l'évier et le fer sur une surface plane. Retirez le bouchon d'élimination du calcaire (15). Avec une pièce de monnaie, faites tourner le bouchon de sécurité de la chaudière dans le sens contraire des aiguilles d'une montre et retirez-le. À l'aide d'un entonnoir et d'une bouteille, mettez 0,2 litres d'eau du robinet dans la chaudière. Agitez le support, puis videz complètement la chaudière dans l'évier. Nous vous conseillons d'effectuer deux fois cette opération. À l'aide d'une pièce de monnaie, revissez le bouchon de sécurité de la chaudière et replacez le bouchon d'élimination du calcaire (15).







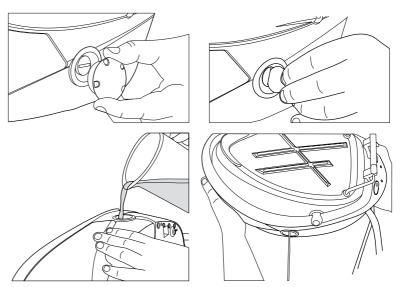


fig. 11: Opération de nettoyage

N'utilisez en aucun cas des produits décapants pour nettoyer ou rincer la chaudière.

Chapitre 4.3 - Rangement

Éteignez l'appareil et retirez la fiche.

Placez le fer sur le tapis résistant à la chaleur (3). Attendez au moins 30 minutes que la semelle et le générateur refroidissent.

Verrouillez le fer à l'aide du système prévu à cet effet (2). Veuillez consulter le chapitre 1.2 pour obtenir de plus amples informations à ce sujet.

Placez le câble électrique et le câble à vapeur à l'endroit prévu à cet effet (6).

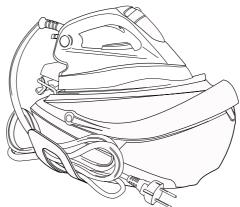


fig. 12: Rangement du cordon

Vous pouvez alors ranger votre appareil facilement et en toute sécurité.

22 - FR

 \bigoplus